





INSIST ON GENUINE FACTORY PARTS PACKAGED WITH OUR A.N. LOGO

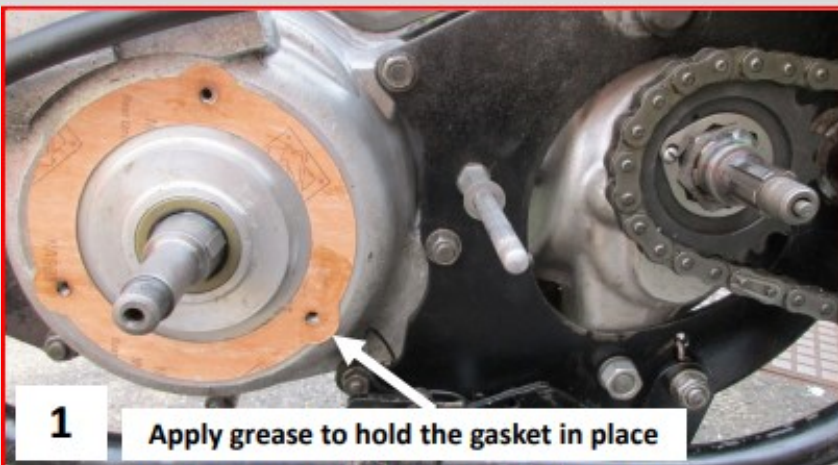

1 Apply grease to hold the gasket in place




3 Trial fit the inner cover. Tighten the three securing screws

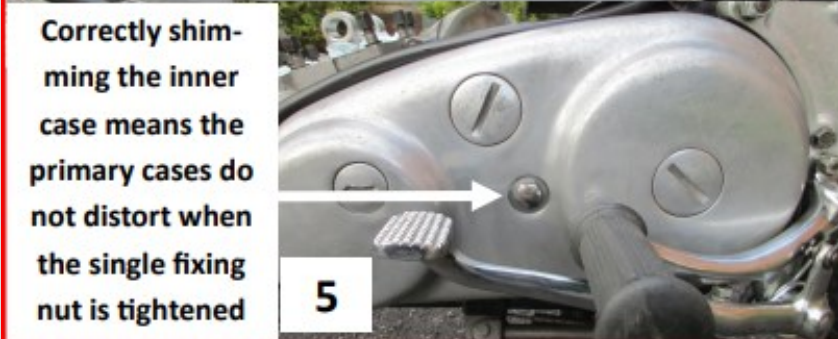


Correctly shimming the inner case means the primary cases do not distort when the single fixing nut is tightened

5

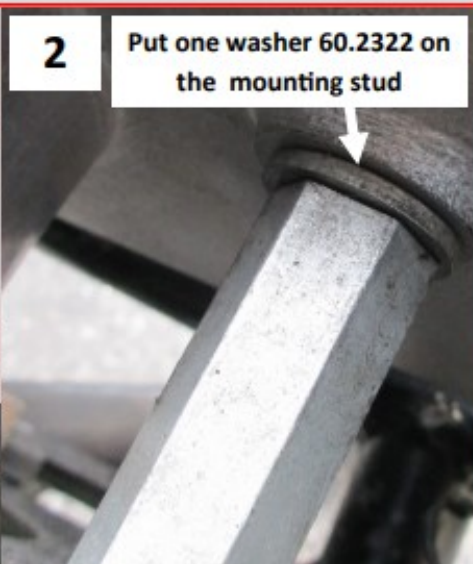

2 Put one washer 60.2322 on the mounting stud

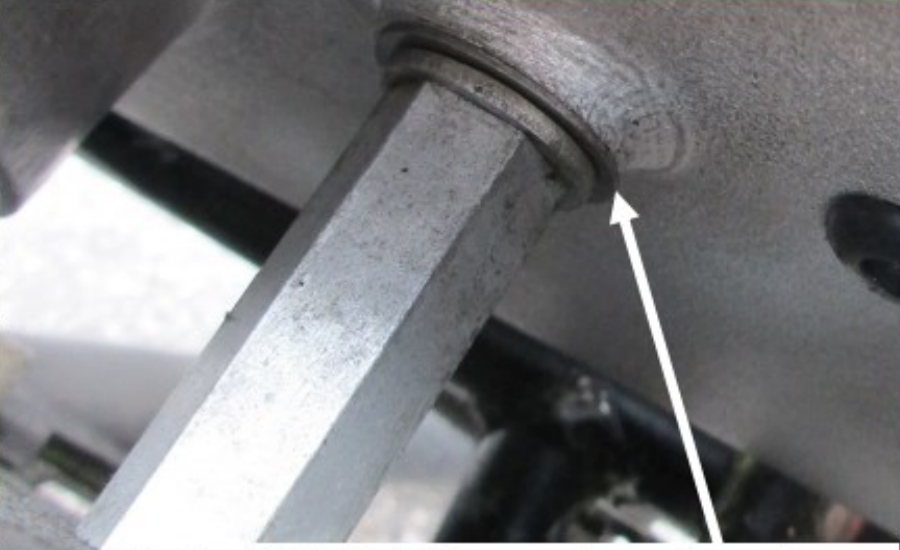

4 Fit shims 06.0399 to fill the gap between the washer and the inner chaincase. Only one was required in my case.

How to Align the 1968 - 74 Commando Inner Primary Drive Cover