



We are the only supplier of Commando & Dominator parts made using the original factory drawings. Our products are mostly made in England to original specification. We also offer Norton Rotary spares, factory service manuals & literature for **NORTON** and **TRIUMPH** motorcycles.

INSIST ON GENUINE FACTORY PARTS PACKAGED WITH OUR A.N. LOGO


WIPAC SERIES 192 "DUCON", "TRICON" & "TRICONSUL" SWITCH For $\frac{7}{8}$ " diameter handlebar

FITTING INSTRUCTIONS


1. Screw in grub screw and remove cover.
2. Push leads through grommet tunnel and attach to *respective terminals* (see diagram).
3. Replace cover and screw out grub screw *sufficiently to clear handlebar*.
4. Remove handlebar grip.
5. Slide switch along handlebar to required position.
6. Secure switch by tightening grub screw.
7. Replace handlebar grip.

WIRING DIAGRAMS


"DUCON" DIP SWITCH & HORN PUSH

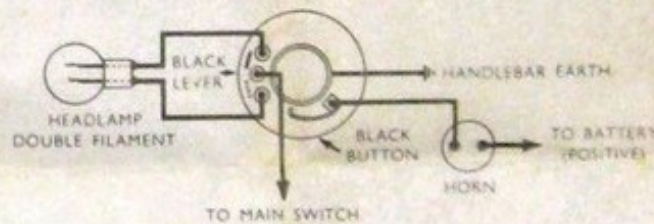

"TRICON" DIP SWITCH, HORN PUSH & ENGINE CUT-OUT

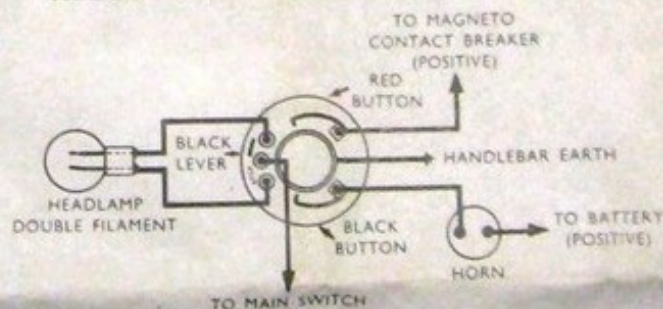

"TRICONSUL" HORN PUSH, DIP & PASS LAMP SWITCH

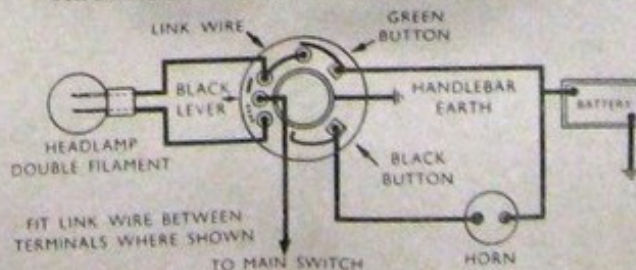

FT. 1050 / 1